



Canon EOS 6D Rear Body Panel Replacement

Replace the rear body paneling of the EOS 6D.

Written By: Justin Thomas



INTRODUCTION

Use this guide to replace the rear body panel of your EOS 6D or to access damaged internal components.



TOOLS:

- [Phillips #00 Screwdriver](#) (1)
 - [Spudger](#) (1)
-

Step 1 — Rear Body Panel



- Remove the viewfinder cover by pinching the sides and sliding it upward.

Step 2



- Open the battery door on the bottom of the camera.
- Use your thumb to slide the small black tab on the inside of the battery door up and pull the door off the camera.

Step 3



- Slide your fingernail or the flat end of the spudger underneath the rubber covering and gently peel it off all sides of the camera.

Step 4



- Open the covers to the HDMI/AV/MIC ports on the side of the camera by gently pulling outward on the bottom of the covers.
- Rotate the covers to the side so that you can see the connection ports inside.
- Remove the following screws:
 - Two silver 5mm Phillips #00
 - One black 6mm Phillips #00

Step 5



- Remove the cover to the HDMI/AV/MIC ports by gently lifting the tab on the bottom edge of the camera.

Step 6




- Rotate your camera so the bottom side is facing you.
- Remove the following screws:
 - Two 6mm Phillips #00
 - One 3mm Phillips #00


Step 7



- Rotate your camera so the back is facing you.
- Remove the following screws:
 - Three silver 5mm Phillips #00
 - Two black 6mm Phillips #00
 - One black 4mm Phillips #00

Step 8

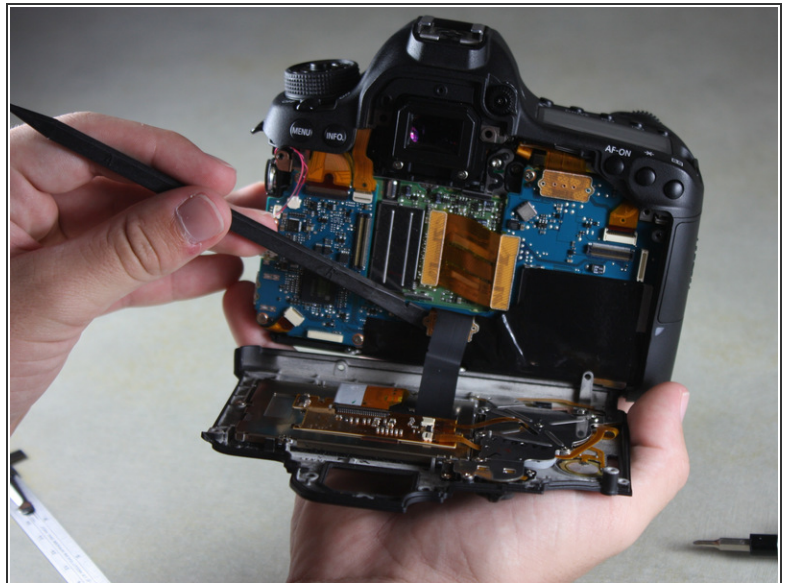

 A black ribbon wire connects the rear panel to the inside of the camera. Breaking this wire would make your rear screen and buttons non-functional.

- Carefully use your fingers to tilt the back panel downward to about a 90 degree angle.
- Use the flat end of the spudger to gently pry off the ribbon wire from the inside of the camera.

To reassemble your device, follow these instructions in reverse order.

This document was last generated on 2017-06-24 03:25:41 AM.